


Necklace Pen Maintenance Instructions

To detach the pen from the necklace pull the gold plated plug that is attached to the cord out of the black finial on top of the pen. To replace simply push it back in.

The writing nib is extracted/retracted by twisting the two body parts in opposite direction.

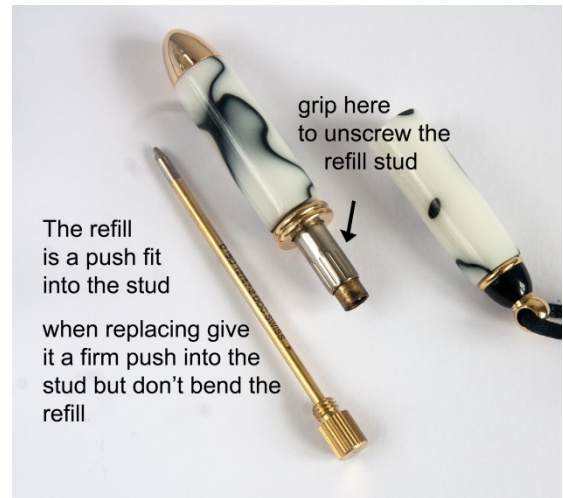

Pictures describing how to remove and replace refill

Refill is D1 type at 67mm length

These are available from Amazon in 5 packs for approx £5.

If I have any in stock I will send out a single for £1.50 incl postage. Email me first at andyandchris@talktalk.net and I'll do what I can.